
SNOM D745

High resolution display and self-labelling keys

Aesthetically appealing and highly practical, the D745 desk phone is a prime solution for those who utilize the telephone in daily work. It is not only easy to use, but also cost effective for large-scale deployment. Its elegant design complements even the most prestigious surroundings, and its high/low angle foot stand allows for maximum user comfort and efficiency. Wideband HD audio ensures crystal clear sound quality, and features such as call management, customizable call lists and address book are provided on a high-resolution graphical display.

A second screen supports four virtual pages, offering a total of 32 programmable keys with multicolored LEDs. The D745 includes a high-speed USB port to connect accessories such as headsets or WiFi sticks, and a gigabit Ethernet switch for connecting LAN or VPN clients to provide an additional layer of security.



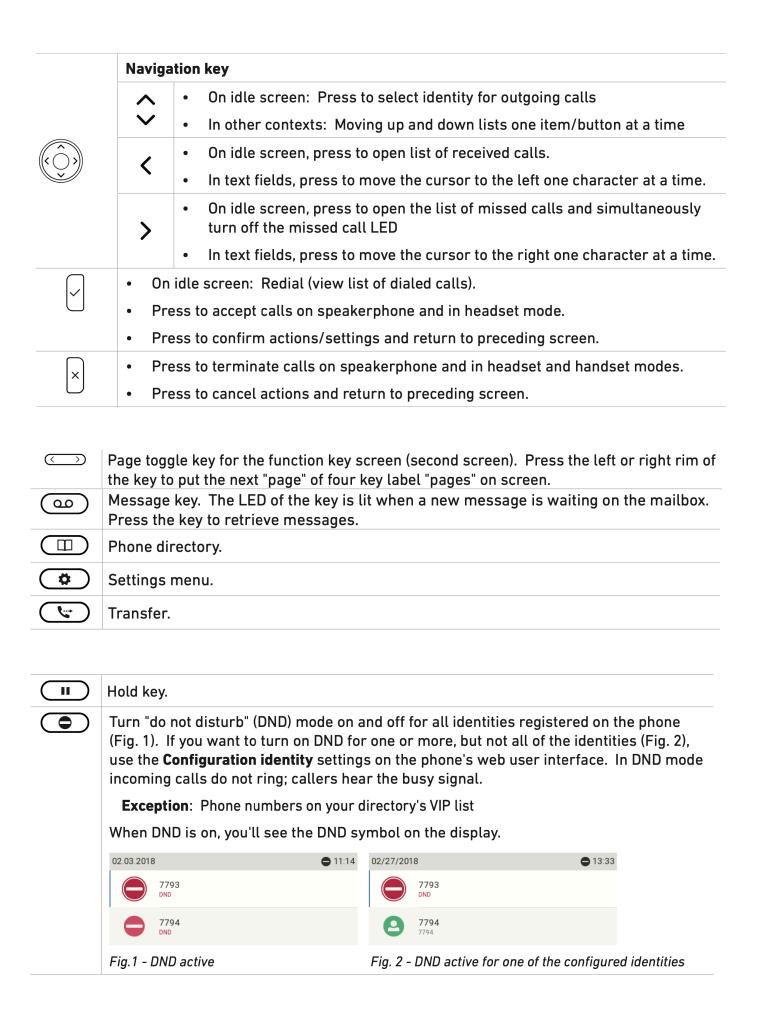

	Press the right or left edge of the key to adjust the volume of the ringer when the phone is idle or ringing of the loudspeaker in handset, casing, or headset, respectively, when in call
<u>₹</u>	Muting and unmuting the microphone
1(1)	 Toggling between handsfree and handset mode Dialing numbers on speakerphone Accepting calls on speakersphone
	Toggling between headset and handset modes. Note: Handset mode overrides headset mode. When the handset is picked up, the headset symbol in the status line will be replaced by the handset symbol, indicating that you can now use only the handset for the call. To return audio to the headset, press again. The headset symbol will reappear in the status line. You can then place the handset in the cradle without ending the call.

In order to access the desk phone and its features, please make sure that the desk phone is provisioned to the users account or organisation as a free seating phone. When provisioned, the user has to be logged in order to access the phones features. Shortcut and quick dial keys are assigned in the user's Self-service portal. Please note that your locally installed configurations will be overwritten after every reboot.

Calling and answering users are managed similarly on all Snom devices. There are five distinctive ways of calling and two ways of answering the phone.

To call:

Dial the number using the numpad and press ✓.

Press any preassigned **shortcut key**.

Press and hold any quick **dial key**.

Select a contact in your contact list and press ✓.

Search for any contact in the directory and press ✓.

To answer.

Either lift the handset or press ✓ to answer via speaker or headset.

To check for missed calls:

Press Call History.

Navigate and select Missed Calls.

Check the missed calls on the display.

To do attended transfer.

When making a call, press **Hold**, the call is now put on hold.

Press the number to the third party, please press ✓ to proceed.

When the call is answered, you may speak to the third party, please press **Transfer** followed by \checkmark to proceed.

To do blind transfer.

When making a call, press Transfer.

Press the number to the third party, please hang up to proceed.

To make conference call:

When making a call, press Hold, the call is now put on hold

Press the number to the third party, please press \checkmark and wait for member to answer.

Press button configured as conference.

To change presence:

Navigate to the Presence Menu through the Settings Menu, please note that the current presence is shown on the display. Select preferred presence and press \checkmark .

Setting up your device

DHCP corresponds to a Dynamic Host Configuration Protocol, i.e. a network management protocol used on IP networks. The DHCP server automatically assigns configurations to each device on the network, i.e. all devices are communicating via the ISP. When the Snom device is connected to the network, it will automatically begin to initialize by connecting to the DHCP and download the configurations. Please note that this moment is the most problematic, troubleshooting usually begins here.

Headsets

The RJ audio jack corresponds to the media inputting source, i.e. connecting a headset or an EHS (Electronic Hook Switch) box. If you want to use a wired headset, please insert the headset cable in the RJ outlet. If you want to use a wireless headset, please interconnect your wireless headset and EHS box to the RJ audio source jack.

Power and internet

Please make sure that your device is connected to a power outlet. In some infrastructures there are PoE (Power over Ethernet) outlets, enabling power sourcing through the ethernet cable. If no PoE opportunities exists, then connect your device to the power outlet. Users may also connect their Snom device directly to a computer using the optional ethernet outlet.

After you have set up the phone and connected it to the network as shown, the phone begins to initialize. Normally the initialization is completely automatic, using DHCP. If your network does not support DHCP, you must obtain the IP address, netmask, IP gateway, and DNS server from your Internet service provider or your network administrator and enter them manually when you are asked to do so on the display.

WHAT TO DO IF REGISTRATION AND INITIALIZATION ARE UNSUCCESSFUL:

Before contacting your system administrator. Press * * # (asterisk, asterisk, square) on the keypad

Press and hold # to reboot the phone Keep holding # until Rescue Mode appears on screen

Press 1 for settings reset

Press any key when prompted to reboot. The phone will be successfully reset after start-up

CAUTION: Do not power off during phone start-up

Contact your network system administrator if the phone is operating or supposed to be operating within a network. If you are using a VoIP provider, you may need to enter further data, as specified by your provider.

